



EXTREME TACTICAL DYNAMICS

SERVING THOSE WHO SERVE US™

1410 Park Lane South Suite 4 - Jupiter, FL – 33458

Phone 888.893.3308 • Fax 561.427.0974 • Email customerservice@extremetacticaldynamics.com

Lynx L6-4 Linear Interior/Exterior LED Light Bar Wiring and Installation Guide

Print a copy of these instructions for future reference. Extreme Tactical Dynamics accepts no responsibility for proper installation, use, or wiring of this [emergency vehicle light](#). We strongly recommend that all buyers/users have an emergency vehicle light technician install it in their vehicle.

How to Power the Lynx L6-4 Interior Light Bar

- Locate cigarette lighter plug
- Plug into vehicle adapter
- Turn light on via on/off switch on adapter
- Switch through flash patterns using switch on adapter

Wiring Tips for the Lynx L6-4

- Ground light with black wire
- Attach red wire to positive battery terminal

Mounting Tips for Lynx L6-4

- Locate L-brackets included with purchase
- Choose a flat surface on the vehicle
- Attach lights with L-brackets
- L-brackets allow the light to be angled
- Use suction cups to mount to a window, if desired
- Add an optional flashback guard



If you have issues or questions regarding the powering, wiring, or mounting of this interior LED light bar please consult an emergency vehicle technician.