



# EXTREME TACTICAL DYNAMICS

*SERVING THOSE WHO SERVE US™*

1410 Park Lane South Suite 4 - Jupiter, FL – 33458

Phone 888.893.3308 • Fax 561.427.0974 • Email [customerservice@extremetacticaldynamics.com](mailto:customerservice@extremetacticaldynamics.com)

## Lynx L6-6 Linear Interior/Exterior LED Light Bar Wiring and Installation Guide

Our Lynx L6-6 emergency light should only be installed by a certified emergency vehicle technician. The user and installer of this unit accepts any responsibility for the installation, wiring, and mount of this light.

### Powering the Lynx L6-6 Interior Light Bar

- Plug attached cigarette lighter plug into vehicle's adapter
- Turn the light on or off via switch on adapter
- Cycle through flash patterns using flash pattern switch

### Tips to Wire the Lynx L6-6

- Ground light with black wire
- Connect red wire to positive switch



### Lynx L6-6 Mounting Guide

- Install light bar using included L-brackets
- Light can be installed on any interior, flat surface
- Use L-brackets to mount light
- The L-brackets allow the light to be installed at an angle
- Add suction cups to the bracket for window mounting
- An optional flashback guard can be used if needed

Please contact an emergency vehicle technician, if you have any questions about the power, wiring, or mounting of this unit.