



EXTREME TACTICAL DYNAMICS

SERVING THOSE WHO SERVE US™

1410 Park Lane South Suite 4 - Jupiter, FL – 33458

Phone 888.893.3308 • **Fax** 561.427.0974 • **Email** customerservice@extremetacticaldynamics.com

Lynx T4-4 TIR Interior/Exterior LED Light Bar Wiring and Installation Guide

Extreme Tactical Dynamics assumes no responsibility for the proper wiring, mount, and overall installation of this interior light bar. We recommend the Lynx T4-4 be installed by a professional emergency vehicle technician.

Lynx T4-4 Power

- Locate the cigarette lighter plug
- Plug the cigarette lighter plug into your vehicle's output
- The on/off and flash pattern switches are located on the cigarette lighter plug

Lynx T4-4 Wiring Tips

The Lynx T4-4 has simple wiring schematics.

- Ground the black wire
- The red wire connects to the positive terminal

Mounting Tips

- Locate the two L-brackets included with purchase
- Light can be mounted on any flat surface
- L-brackets allow the light to be mounted at any angle
- Suction cups can be used to attach the light to a window
- An optional flashback guard can be purchased

