



EXTREME TACTICAL DYNAMICS

SERVING THOSE WHO SERVE US™

1410 Park Lane South Suite 4 - Jupiter, FL – 33458

Phone 888.893.3308 • Fax 561.427.0974 • Email customerservice@extremetacticaldynamics.com

Half Pint Deck Light Simple Wire and Mount Instructions

To make it easy for you to install your new Half Pint Deck Light, we have gathered simple wire and mount instructions. **To ensure the light is installed correctly, we highly suggest you have the LED unit installed by a professional emergency vehicle light technician.**



Half Pint Deck Light Mount Instructions

- Unbox light and mounting hardware
- Choose a location for the deck light
- Check for obstructions before drilling
- Make sure you will not have to run wires through the airbag deployment path
- Hold light against surface
- Mark mounting holes
- Drill deck light mounting holes
- Drill an additional centered hole for wires
- Pass wires through centered hole
- Attach deck light with included hardware

Mount the Switch Box

- Choose a location that is easy to access while driving
- Consider mounting the switch near the instrument panel



How to Power the Half Pint Deck Light

- Connect the light to a pre-existing digital controller
- The red wire connects to the positive terminal
- Black wire needs to be connected to a ground terminal

Troubleshooting Issues

If you have any issues installing the Half Pint deck light, please feel free to [contact us via phone, email, or social media](#). It's worth mentioning that most issues with wiring are related to faulty or incomplete battery or wiring connections. By double-checking your connections and wire attachments, you can eliminate most issues right away.

