



EXTREME TACTICAL DYNAMICS

SERVING THOSE WHO SERVE US™

1410 Park Lane South Suite 4 - Jupiter, FL – 33458

Phone 888.893.3308 • Fax 561.427.0974 • Email customerservice@extremetacticaldynamics.com

Ranger Split TIR LED Deck Light Wiring and Installation Guide

The Ranger Split TIR LED Deck Lights are weatherproofed for exterior or interior installation. **For best results, and to protect the integrity of your [emergency light](#) set-up as well as your manufacturer warranty, we recommend these LED lights be installed by an emergency vehicle technician.** If you install your emergency lights yourself, it is important to remember that most installation failures are caused by improper wiring or battery connections. The easiest way to eliminate this problem is to repeat the steps mentioned below.



Ranger Split TIR LED Deck Light Emergency Light Mounting Tips

- Unbox Ranger Split TIR LED Deck Light and hardware
- Locate the L mount brackets
- Choose a location for your dash and deck light installation
- Mark mounting holes (use masking tape to mark holes)
- Drill marked mounting holes
- Drill hole for wires
- De-burr holes to protect wires and remove debris
- Insert wires
- Install Deck 2 Dual lights with hardware included with purchase

Ranger Split TIR LED Deck Light Basic Wiring Instructions

To power the Ranger Split TIR LED Deck Lights, you will need to locate the unit's red and black wires. The red wire connects to a pre-existing switch source, and the black wire connects to a negative ground source. After completing this step, you will be able to power the light on.



A Built in controller is included for changing the flash pattern, and powering the light on and off.

Please [contact Extreme Tactical Dynamics](#) with any issues regarding the installation or wiring of Ranger Split TIR LED Deck Light.